

SPARE PARTS LIST

PAGE 1

MODEL NO. DGA454

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	629134-6	STATORCOMPLETE	1	
002	210034-7	BALLBEARING607LLB	1	
003	519354-9	ROTOR ASS'Y INC. 2	1	
004	319214-3	GEAR HOUSING COVER	1	
005	213445-5	O-RING26	1	
006	210042-8	BALLBEARING629LLB	1	
007	227541-3	SPIRALBEVELGEAR10	1	
008	252186-8	HEX.NUTM6	1	
009	417771-6	PINCAP	1	
010	233072-2	COMPRESSIONSPRING8	1	
011	266361-0	TAPPINGSCREW4X30	4	
012	213960-9	ORING5	1	
013	256546-6	SHOULDER PIN 4	1	
014	319213-5	GEAR HOUSING	1	
015	263002-9	RUBBERPIN4	1	
016	210033-9	BALLBEARING696ZZ	1	
017	233950-6	RINGSRING11	1	
018	227641-9	SPIRAL BEVEL GEAR 37	1	
019	962151-6	RETAININGRINGR-32	1	
020	211129-9	BALLBEARING6201DDW	1	
021	267113-2	FLATWASHER12	1	
022	213622-9	ORING45	1	
023	318331-6	BEARING BOX	1	
024	911121-2	PANHEADSCREWM4X14	4	
025	345464-4	LABYRINTHRING	1	
026	324954-0	SPINDLE	1	
027	123144-0	TOOLLESSWHEELCOVER115AKASSY	1	
028	224415-9	INNERFLANGE42	1	
029	224554-5	LOCKNUT14-45	1	
030	850J29-4	DGA454 NAME PLATE	1	
031	266326-2	TAPPINGSCREW4X18	5	
032	455450-8	DUST COVER R	1	
033	187998-9	MOTOR HOUSING SET INC. 41	1	
034	455447-7	SWITCH KNOB	1	
035	455446-9	SWITCH LEVER	1	
036	455448-5	LEVER	1	
037	231679-8	TORSION SPRING 2	1	
038	268330-7	PIN 2	1	
039	142901-7	INDICATOR PANEL COMPLETE	1	
040	650579-7	SWITCH1246.3223	1	
041	187998-9	MOTOR HOUSING SET INC. 33	1	
042	455449-3	DUST COVER L	1	
043	643899-6	TERMINAL	1	
044	632E34-1	RESISTORUNIT	1	
045	632E33-3	LEADUNIT	1	
046	850J34-1	DGA454 SERIAL NO. LABEL	1	
A01	A-80640	DEPRESSEDCENTERWHEEL115X36	1	
A02	158237-4	GRIP 36 COMPLETE	1	
A03	782423-1	LOCKNUTWRENCH35	1	
A04	821551-8	CONNECTOR PLASTIC CASE (TYPE3)	1	
A05	838175-3	INNER TRAY	1	
A06	805H91-2	DGA454ZJ INDICATION LABEL	1	
A07	805H92-0	DGA454ZJ PLASTIC CASE LABEL	2	

SERVICE DRAWING

MODEL NO. DGA454

