

SPARE PARTS LIST

MODEL NO. PJ7000

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
001	922422-3	HEX. SOCKET HEAD BOLT M8X16	2	
002	941202-8	FLAT WASHER 8	2	
003	453218-6	GRIP	1	
004	266324-6	TAPPING SCREW 4X22	4	
005	417771-6	PIN CAP	1	
006	234057-1	COMPRESSION SPRING 8	1	
007	252186-8	HEX. NUT M6	1	
008	227545-5	SPIRAL BEVEL GEAR 10	1	
009	213445-5	O-RING 26	1	
010	211092-6	BALL BEARING 629DDW	1	
011	962105-3	RETAINING RING R-26	1	
012	413126-3	GUIDE PLATE	1	
013	*****	*****	***	*****
014	517649-4	ARMATURE ASSY 240V INC. 13,15,16	1	
015	681636-0	INSULATION WASHER	1	
016	210034-7	BALL BEARING 607LLB	1	
017	421868-5	LABYRINTH RUBBER RING 19	1	
018	450796-7	BAFFLE PLATE	1	
019	266325-4	TAPPING SCREW 4X70	2	
020	623533-4	FIELD 220-240V	1	
021	896483-8	PJ7000 NAME PLATE	1	
022	266492-5	TAPPING SCREW 3X8	2	
023	643839-4	BRUSH HOLDER 6X9	2	
024	194722-3	CARBON BRUSH CB-459	1	
025	650621-4	SWITCH PS10	1	
026	687681-3	STRAIN RELIEF	1	
027	266326-2	TAPPING SCREW 4X18	1	
028	645200-1	NOISE SUPPRESSOR	1	
029	682569-2	CORD GUARD 8-85	1	
030	695034-2	POWER SUPPLY CORD 1.0-2-4.0	1	
031	266326-2	TAPPING SCREW 4X18	1	
032	450794-1	REAR COVER	1	
033	450797-5	SWITCH LEVER	1	
034	233121-5	COMPRESSION SPRING 4	1	
035	450795-9	MOTOR HOUSING	1	
036	419566-3	SWITCH KNOB	1	
037	213032-0	O RING 4	1	
038	256510-7	SHOULDER PIN 4	1	
039	141327-0	GEAR HOUSING COMPLETE	1	
040	210033-9	BALL BEARING 696ZZ	1	
041	233950-6	RING SPRING 11	1	
042	227546-3	SPIRAL BEVEL GEAR 37	1	
043	962151-6	RETAINING RING R-32	1	
044	211129-9	BALL BEARING 6201DDW	1	
045	326120-5	SPINDLE	1	
046	213561-3	O RING 42	1	
047	318811-2	BEARING BOX	1	
048	911136-9	PAN HEAD SCREW M4X20	4	
049	911136-9	PAN HEAD SCREW M4X20	2	
050	931203-4	HEX. NUT M5	1	
051	266741-0	PAN HEAD SCREW M5X50	1	
052	453406-5	BASE COVER	1	
053	326145-9	ROD 10	2	
054	141247-8	FENCE COMPLETE	1	
055	961017-7	STOP RING E-3	2	
056	256689-4	PIN 4	2	
057	318813-8	BASE	1	
058	231282-5	COMPRESSION SPRING 2.4	1	
059	216001-0	STEEL BALL 3.5	1	
060	318814-6	STOPPER	1	

SPARE PARTS LIST

MODEL NO. PJ7000

ITEM	PART NO.	DESCRIPTION	QTY	NOTE
061	266264-8	H.S.SET SCREW(FLAT POINT)M5X6	2	
062	266738-9	+PAN HEAD SCREW M4	1	
063	213008-7	O RING 22.4	1	
064	415252-4	DUST NOZZLE	1	
065	265785-7	THUMB SCREW M5X10	1	
066	232131-9	LEAF SPRING	1	
067	213023-1	O RING 4	1	
068	266737-1	FLAT HEAD SQ. NECK BOLT M6X20	1	
069	231282-5	COMPRESSION SPRING 2.4	1	
070	216001-0	STEEL BALL 3.5	1	
071	231795-6	TENSION SPRING 8	2	
072	272263-0	LEVER 40	1	
073	252159-1	HEX. NUT M6	1	
074	961014-3	STOP RING E-8	1	
075	253804-1	FLAT WASHER 6	1	
076	224280-6	INNER FLANGE 40	1	
077	224505-8	LOCK NUT 10-40	1	
078	318845-5	BLADE COVER	1	
079	424479-5	RUBBER SPIKE	2	
080	213023-1	O RING 4	1	
A01	123149-0	ANGLE GUIDE ASSEMBLY COMPO-PARTS	1	
A02	123150-5	DUST BAG ASSEMBLY	1	
A03	415579-2	SET PLATE 4	1	
A04	B-20644	CUTTER 100MMX6T	1	
A05	782401-1	LOCK NUT WRENCH 20	1	
A06	821509-7	PLASTIC CARRYING CASE	1	
A07	890461-0	PJ7000 PLASTIC CASE LABEL	2	

SERVICE DRAWING

MODEL NO. PJ7000

